

SILLITIN N 75

Field of application: Elastomers

1. Description

SILLITIN N 75 is a natural combination of corpuscular silica and lamellar kaolinite. These two elements together form a loose structure which offers particular advantages in terms of application possibilities when used as a functional filler.

Characteristics

Appearance		free-flowing powder
Color CIELAB scale:	L*	88.0
	a*	4.5
	b*	20.0
Residue > 40 µm		25 mg/kg
Volatile matter at 105 °C		0.5 %
Density		2.6 g/cm ³
Particle size distribution	D ₅₀	3 µm
	D ₉₇	16 µm
Surface area BET		12 m ² /g
Oil absorption		45 g/100 g

Packaging

Paper bags	à 25 kg
EVA bags	≤ 20 kg
Big Bags	750 - 1200 kg
Bulk	≤ 25 t

Shelf life

Unlimited if stored properly under dry conditions.



2. Applications

In elastomer applications SILLITIN N 75 can be used as a functional filler either on its own or in combination with other non-reinforcing or reinforcing fillers, primarily carbon black

Information on compliance with certain regulations/recommendations and other safety-related aspects: [Product safety information](#)

Fields of application

In general SILLITIN N 75 is suitable for any rubber products used for technical applications, primarily for black compounds.

Its particular properties are low compression set and high rebound resilience.

In black profiles and hoses it achieves good matting effect.

Besides black, it is also suitable for brown and dark mixtures.

Methods of processing:

Any process commonly used in the rubber industry.

Elastomers:

BIIR, BR, CIIR, CR, HNBR, IIR, IR, NBR, NR, PNR, SBR;
CM, CSM, EPM, EPDM, EVM.

Metering:

EPM, EPDM:	50 - 400 phr
NBR:	50 - 250 phr
NR:	50 - 250 phr
SBR:	50 - 250 phr



3. Benefits

- good, fast incorporation
- very good dispersion behavior
- good rheological properties
- excellent surfaces
- good extrusion properties
- good heat conductivity
- hardly any negative influence on curing rate
- very low tensile and compression set
- high electric insulation resistance
- good aging properties
- high chemical resistance
- complies with the standards on basic foodstuffs of the BfR and FDA
- matting effect

Comparison of properties

	SILLITIN V	SILLITIN N	SILLITIN Z	SILLIKOLLOID P
Viscosity	•	••	•••	••••
Tensile strength	•	••	•••	••••
Tear resistance	•	••	•••	••••
Compression set	•	••	•••	••••
Profile quality (Extrusion)	•	••	•••	••••
Matting effect (Extrusion)	••••	•••	••	•
Elasticity	••••	•••	••	•
Abrasion	••••	•••	••	•

• = low •••• = high




4. Particle size distribution

The measurement method for these particle size distributions is based on the Fraunhofer diffraction spectrum. The analyses were carried out with Mastersizer 3000, a laser apparatus of Malvern.

Important:

The data on particle size distribution is highly dependent upon the method used, test preparations and the measuring device itself. As a result the values given may not be directly comparable with those provided by another manufacturer.

If you have any queries please contact us direct.

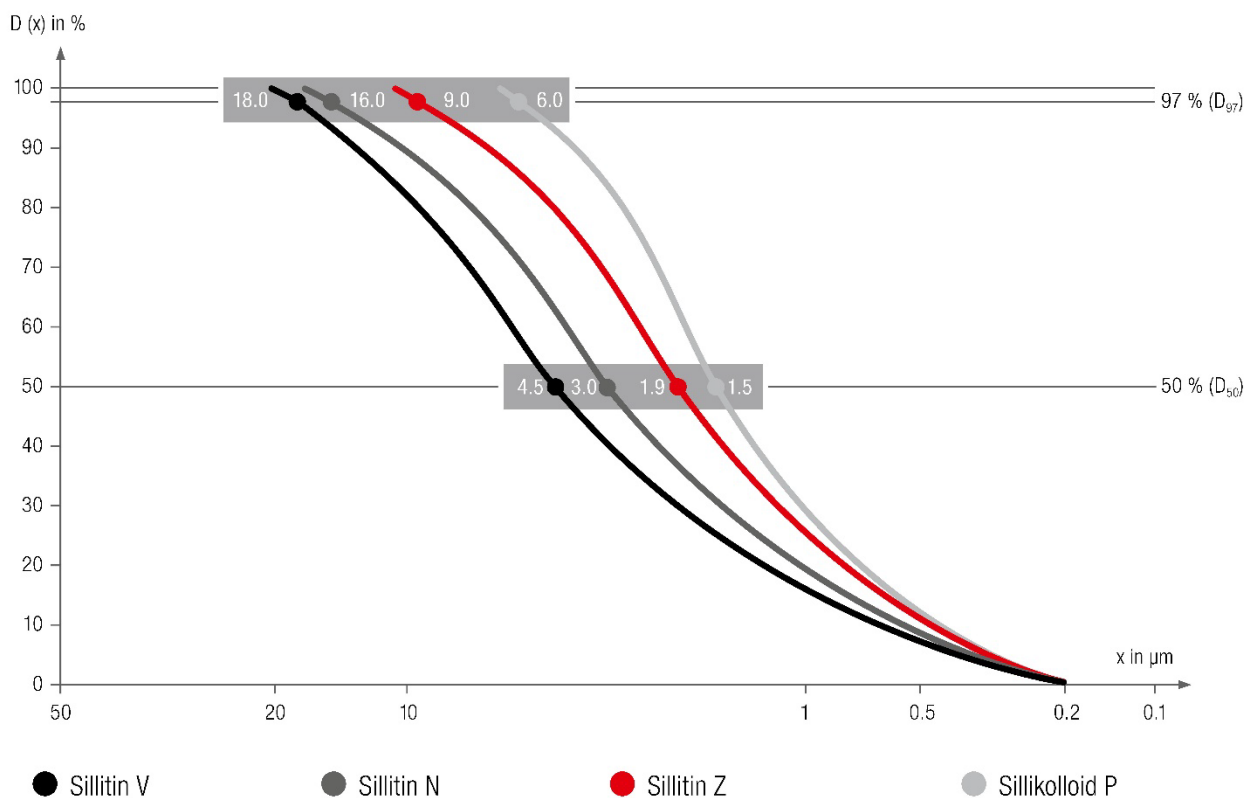

Our applications engineering advice and the information contained in this memorandum are based on experience and are made to the best of our knowledge and belief, they must be regarded however as non-binding advice without guarantee. Working and employment conditions over which we have no control exclude any damage claim arising from the use of our data and recommendations. Furthermore we cannot assume any responsibility for patent infringements, which might result from the use of our information.